



Crosbys Rise and Fall Salamander Instruction Manual

Models

CRE- SALAM

Thank you for purchasing your Crosbys Rise and Fall Salamander. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.

Safety Tips

- If you find any damage when the product is unpacked, contact your Crosbys supplier within 24 hours of receipt of goods
- Always position on a flat stable surface
- Do not place any items on top of the salamander grill
- Repairs should always be carried out by a qualified technician
- DO NOT submerge this product in water.
- Do not use direct jets/ high pressure water/ jet-clean-spray to clean this product.
- Do not use this product outdoors or place it in environments where there is open fire such as gas stove or kerosene stove in use
- Always switch off or unplug the unit before cleaning
- Always pull up and down the grill hood with plastic handle only
- Move by holding the product by the base
- Always plug into a grounded outlet. Do not use an adapter or an extension cord.
- If the power cord becomes damaged it must be replaced by a qualified technician
- This product is not designed to be used by persons with reduced physical or mental capabilities, lack of experience or knowledge, unless they are given suitable supervision, this includes children.

Pack Contents

- 1 x Crosbys Rise & Fall Salamander
- 1 x Grill Rack
- 1 x Drip Tray
- 1 x Manual

Before Use

- Remove all packaging including all protective plastic from your Crosbys Salamander
- Position on a flat surface or properly mounted wall shelf
- Ensure the drip tray is correctly positioned
- Plug your Crosbys Salamander into the mains
- The machine will now be ready to turn on

Operation

- Ensure the Salamander is plugged in and the green light is on
- Select the temperature you require with the dial, the yellow heating indicator light will be on. The maximum temperature of this product is 300 °C
- Raise the grill hood to the top and place food on the grill rack. Lower the hood to a desired position and cook.
- Once the salamander has reached the desired temperature, the yellow heating light will switch off. The green power light remains on as long as the power is connected and the unit is on.
- Raise the grill hood to the top with the handle and the food is now ready to take out
- When temperature lowers, the yellow light will be on and the salamander will heat up again automatically until the dial is turned to "0" position

Note: If the dial is turned to maximum  position, the salamander will heat continuously with maximum temperature

Note: This unit has a re-set button on the base. The Salamander will automatically turn off if the temperature is too high. Once the appliance cools down, press the re-set button to resume the function.

Cleaning & Maintenance

- Before cleaning disconnect the salamander from the power supply.
- Allow the salamander to cool down before cleaning.
- The rack and drip tray are removable for cleaning.
- All other parts of the salamander can be cleaned with a damp cloth
- DO NOT submerge the salamander in water or use water sprays to clean it.
- Always clean your Crosbys Salamander daily to avoid grease build up
- Use only non-abrasive cleaners and pads. Abrasive cleaners and scouring pads could scratch the finish of the salamander.

Troubleshooting

Condition	Possible Cause	Solution
The unit is plugged in but power indicator is not on & the unit is not working	1. The unit is not switched on 2. The plug or lead are damaged 3. The fuse has blown 4. Overheat protection is triggered	1. Check the unit is correctly plugged in and switched on 2. Contact your Crosbys distributor 3. Replace the fuse 4. Cool the unit for about 3 minutes, then press "reset" button on the base
The grill hood is not heating when the power and heating indicator are both on	1. Temperature controller may be broken 2. At least one of heating wires may have burnt out	1. Contact your Crosbys distributor 2. Contact your Crosbys distributor
The power is on/temperature controller is switched and heating indicator is on, the temperature cannot be controlled	The thermostat may need to be replaced	Contact your Crosbys distributor
Indicator is not on when the power is on and the unit is heating	Power indicator light may need to be replaced	Contact your Crosbys distributor

Transportation and Storage

Please handle your salamander with care to prevent any damage to the unit and internal parts.

The product should be stored in a well-ventilated area. Do not store any flammable objects near the equipment.

Technical Information

CRE- SALAM – Crosbys Rise & Fall Salamander

Voltage 220~240v 50/60Hz

Power 2.8Kw

Weight 38.5kg

Dimensions 450 x 450 x 500 mm

- Crosbys Salamander is supplied with a 3 pin plug and lead with a 13 amp fuse
- Appliance must be earthed
- If in doubt contact a qualified electrician or your Crosbys distributor

Disposal



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Crosbys distributor or local authority responsible for waste disposal.

Compliance



All Crosbys parts and products have under gone a stringent testing process to ensure that comply with the provisions of the relevant specific standards and all UK legislations.

Meanwhile, they also comply with all European standards and specifications. All Crosbys products carry the UKCA and CE approval symbols.