



Crosbys Slot Toaster Instruction Manual

Models

CRE- TOAST4 – 4 Slot
CRE- TOAST6L – 6 Slot

Thank you for purchasing your Crosbys Slot Toaster. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.

Safety Tips

- If you find any damage when the product is unpacked, contact your Crosbys supplier within 24 hours of receipt of goods
- Always position on a flat stable surface
- Repairs should always be carried out by a qualified technician
- Do not use this product outside
- Do not touch the elements with anything when the toaster is in operation
- Do not carry when hot
- Always switch off and unplug the unit before cleaning
- Move by holding the product by the base
- Always store flat and do not store products on top of it
- If the power cord becomes damaged it must be replaced by a qualified technician
- We recommend this toaster is plugged into a socket that has no other appliance connected to it.
- This product is not designed to be used by persons with reduced physical or mental capabilities, lack of experience or knowledge, unless they are given suitable supervision, this includes children.

Pack Contents

- 1 x Crosbys Slot Toaster

Before Use

- Remove all packaging including from your Crosbys Slot Toaster
- Position on a flat surface
- Ensure the crumb tray is correctly positioned
- Plug your Crosbys Slot Toaster into the mains
- The toaster will now be ready to turn on

Operation

- Ensure the toaster is plugged in and the power is on
- Insert the bread into the slots and move the lever up so the bread is completely inside the toaster
- Select the setting you require
- **4-slot**
 - 2 slot operation - Press 1st button.
 - 4 slot operation - Press 2nd button (with 1st button still ON)
- **6-slot**
 - 2 slot operation - Press 1st button.
 - 4 slot operation - Press 2nd button (with 1st button still ON)
 - 6 slot operation - Press 3rd button (with 1st & 2nd buttons still ON).
- Once you have selected the desired setting the toaster will start to heat up
- When the toaster has reached the end of the cycle it will ding.
- Once its completed, push the lever down and the toaster will pop out

Cleaning & Maintenance

- Before cleaning disconnect the toaster from the electricity supply.
- Remove the crumb tray and clean in warm soapy water
- Clean the outside of the toaster with a soft cloth

- DO NOT submerge the toaster in water or use water sprays to clean it
- Always clean your Crosbys Slot Toaster daily, this will stop grease building up and becoming difficult to clean.

Troubleshooting

Fault	Possible Cause	Solution
The power is switched on but the unit is not heating	The plug or lead are damaged	Contact your Crosbys distributor
	The fuse has blown	Replace the fuse
Indicator is not on when the power is on and the unit is heating	Power indicator light may need to be replaced	Contact your Crosbys distributor
Indicator is on but the elements are not heating	Slot switching button is not selected properly	Refer to "Operation" section
	Internal wiring fault	Contact your Crosbys distributor
	At least one of heating elements may have burnt out	Contact your Crosbys distributor
Indicator is on and the elements are heating, but toasting performance is not ideal	Wrong setting on timer	Try another setting until satisfied
	The thermostat or timer may need to be replaced	Contact your Crosbys distributor

Transportation and Storage

Please handle your slot toaster with care to prevent any damage to the unit and internal parts. The slot toaster should be stored somewhere which is ventilation and non-corrosive gas. Do not store any flammable objects near the equipment.

Technical Information

CRE- TOAST4 – 4 Slot Toaster

Voltage 220~240v 50/60Hz

Power 1.98Kw

Dimensions 380 x 234 x 222 mm

CRE- TOAST6L – 6 Slot Toaster

Voltage 220~240v 50/60Hz

Power 2.86Kw

Dimensions 480 x 234 x 222 mm

- Crosbys Slot Toaster are supplied with a 3 pin plug and lead with a 13 amp fuse
- Appliance must be earthed
- If in doubt contact a qualified electrician or your Crosbys distributor

Disposal



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Crosbys distributor or local authority responsible for waste disposal.

Compliance



All Crosbys parts and products have under gone a stringent testing process to ensure that comply with the provisions of the relevant specific standards and all UK legislations.

Meanwhile, they also comply with all European standards and specifications. All Crosbys products carry the UKCA and CE approval symbols.